


WATERSAVER DIVERTER INSTALLATION INSTRUCTIONS


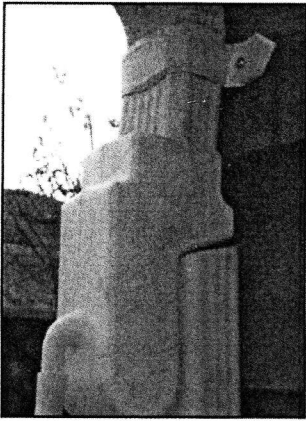


Install at downspout elbow.



-OR-

cut the downspout a minimum of 18" above the rain barrel.

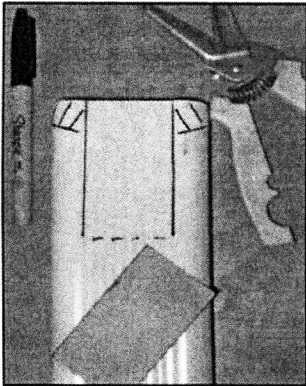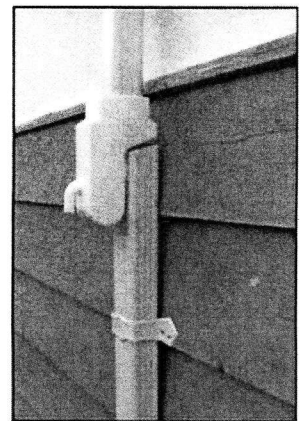

1


Draw two lines 3" long and 1.75" apart. (75 mm long & 45 mm apart)

Helpful Hint: Cut a piece of cardboard 3" long and 1.75" wide and use the cardboard as a template.

2

Cut the tab out using utility scissors.

Pull back part of the tab as shown and leave it out, or tuck the tab into your downspout.


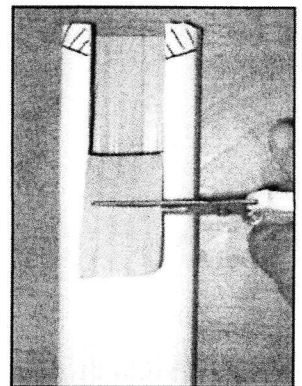


3

Shape each side of the downspout by cutting the angle 1/2" to 0". (12 mm to 0)

4

Slide your Diverter into the cut out slot in your downspout.

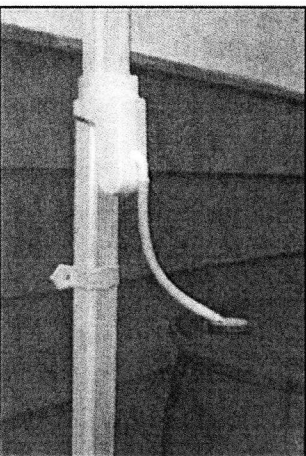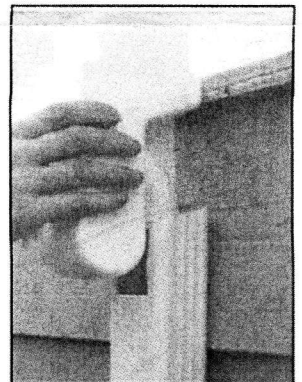

5

Insert upper portion of your downspout into the diverter opening.

Downspout tie downs will hold everything in place.

Attach the hose to the diverter and insert the other end into a completely closed rain barrel and you are ready to collect water!

For round or small square downspouts, simply reduce the length of the downspout by 4" (10cm) and fit it over the diverter's large spout.

USEFUL HINTS

The deactivating plug which comes with your kit is used to deactivate the system when rainwater is not needed, such as in the winter. It can also be used to flush the roof prior to collecting rainwater (let it rain for 15-20 minutes prior to reattaching the hose).

