



### Female Hose Beginning w/Swivel

Use to attach mainline tubing to a faucet, hose or the male hose threads of a filter or adapter. The most common way to start a system.



### FIGURE 8 END

The most common fitting used to end a line. Simply slip over the end of the line, bend the tubing over, and slip over the end again




### DELUXE Y FILTER

This filter includes a 200 mesh stainless steel screen. It has more surface area and lasts longer between cleanings than regular filters.



### Pocket Punch

Will easily punch holes for 1/4" fittings or emitters into 1/2" mainline tubing. Has holder to help when installing transfer barbs or certain emitters

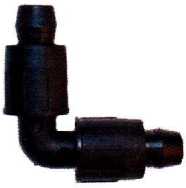

### 1/2 Inch Easy Loc Elbow


Use this fitting to go around a corner that would otherwise kink the mainline tubing

### COUPLER




A necessary repair part. Always have a few on hand for joining 2 pieces of mainline tubing.

### TEE

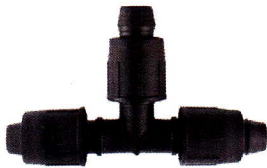


Use to branch off mainline tubing in two directions

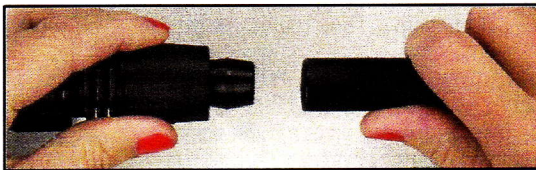

(1)




(2)

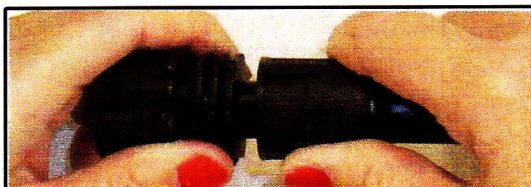

(3)

## How to Use Easy Loc Fittings

1. Start by turning the collar on the Easy Loc fitting counterclockwise  until it tightens up to the body of the fitting.
2. Slide the tubing over the barb as far as it will go toward the body of the fitting. (Hot soapy water may be used to soften and lubricate the tubing.)
3. Once the tubing is in position, turn the collar clockwise until it is tight. Use pliers to secure it if necessary.